KIBBLEWHITE PRECISION MACHINING, INC • 580 CRESPI DRIVE, UNITS H&I • PACIFICA, CA 94044 www.kpmi.us • PHONE (650) 557-2046



## Installation Instructions for KPMI Part No.: 20-21205 Harley Davidson • Milwaukee-Eight Engines (& CVO's\*) • 2017-'24

Beehive Racing Valve Spring Kit

\*2023-2024 CVO's check valve lift to determine compatibility with KPMI spring kits

## A) 20-21205 Kit Includes:

<u>Qty</u>	<u>Application</u>	Description
8 - Pcs	Intake / Exhaust	Titanium Retainers
8 - Pcs	Intake / Exhaust	Chrome Silicon Beehive Springs
8 - Pcs*	Intake / Exhaust	HT Steel Basewashers**
8 - Pcs	Intake / Exhaust	Tophat Seals

\*\*Note: These basewashers are designed to fit on top of either the OEM or KPMI Tophat seals provided in this kit.

### B) Recommended Installed Height - Intake / Exhaust

1.	Installed Height	1.495"-1.505"
2.	Seat Pressure	85 lbs
3.	Open Pressure at 0.550" lift	. 257 lbs
4.	Max Valve Lift	0.550"

### C) Notes:

1. The difference between the installed height and the coil bind height is considered "Free-Travel"


The coil bind height is determined by compressing the spring(s) with the Retainer and Basewasher in place (a vice can be used for this operation). Once springs are compressed, measure the distance between the Retainer and Basewasher where the Outer Spring contacts them.

- 2. Free-travel should always be gross valve lift +0.060" for safe operation.
- 3. Retainer-to-Seal / Guide clearance should also be gross valve lift +0.060" for safe operation.
- 4. Failure to check valve train clearances can result in serious damage to an engine

Packaged By:


Date:

# **TECH TIPS**

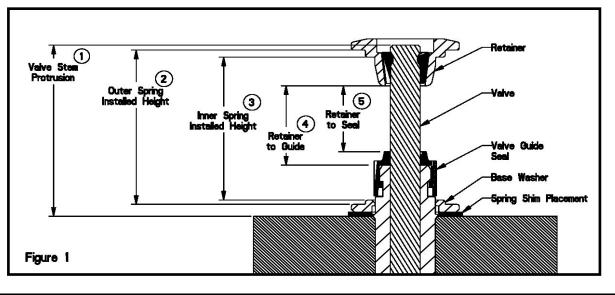

### Valve Train Terminology

- 1. Stem Protrusion is measured from the tip of the valve stem to the cylinder head. See Figure 1.
- 2. Outer spring installed height is measured where the outer spring contacts the Retainer and Basewasher when assembled (See Figure 1).
- 3. Inner spring installed height is measured where the inner spring contacts the Retainer and Basewasher when assembled (See Figure 1).
- 4. Retainer-to-Guide clearance is the distance between the Valve Guide (w/o the seal) and the bottom of the Retainer, with the Valve in the closed position (See Figure 1 and Notes 3 & 4).
- 5. Retainer-to-Seal clearance is the distance between the Valve Stem Seal and the bottom of the Retainer, with the Valve in the closed position (See Figure 1 and Notes 3 & 4).

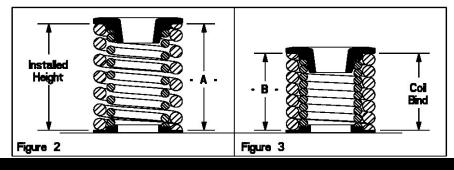

### Installed Height

1. In Figure 2 the installed height is measured from where the Outer Spring contacts the Retainer and the Basewasher. This measurement is taken when the Valve, Basewasher, Retainer, and Keepers are assembled in the cylinder head.

### Coil Bind / Solid Height:

1. In Figure 3 the coil bind height is determined by compressing the Spring(s) with the Retainer and Basewasher in place (a vice can be used for this operation). Once springs are compressed, measure the distance between the retainer and basewasher where the Outer Spring contacts them.

#### Notes:

- 1. The difference between the installed height and the coil bind height is considered "Free-Travel"
- 2. Free-travel should always be gross valve lift +0.060" for safe operation.
- 3. Retainer-to-Seal / Guide clearance should also be gross valve lift +0.060" for safe operation.
- 4. Failure to check valve train clearances can result in serious damage to an engine.