



Installation Instructions for KPMI Part No: **80-80950**

WR450F 2003-'15 • YFZ450 2004-'09 • YFZ450R 2009-'23 • YFZ450R SE 2010-'23 • YFZ450X 2008-'11 • YZ450F 2003-'09

Stainless Steel Valve Intake Spring Kit

For applications with low hours and/or apparent intake face recession, and exhaust components that meet factory specifications, you may consider KPMI's Intake Only Systems when performing necessary service. Bear in mind that KPMI does not advise partial conversions on race bikes and/or engines that have reached factory advertised service limits. Always consult with qualified professionals suited to inspect your machine.

A) 80-80950 Kit Includes

<u>Qty</u>	<u>Application</u>	<u>Description</u>
3 - Pcs	Intake	Titanium Retainers
3 - Prs	Intake	Chrome Silicon Springs
3 - Pcs	Intake	H.T. Steel Basewashers
3 - Pcs	Intake	Valve stem Seals
2 - Pcs	Outer Intake	White Diamond Valves
1 - Pcs	Center Intake	White Diamond Valves

B) Recommended Installed Height - Intake

1.	Installed Height	1.100" - 1.110"
2.	Seat Pressure	39 #
3.	Open Pressure at .300" lift	76 #
3.	Open Pressure at .380" lift	86 #
4.	Max Valve Lift	0.380"

C) Notes

1. The inner valve spring registers on the O.D. of the valve guide. If shimming is required be sure that the inner spring can still register on the valve guide
2. The difference between the installed height and the coil bind height is considered "Free-Travel"

The coil bind height is determined by compressing the spring or springs with the retainer and basewasher in place, a vice can be used for this operation, once springs are compressed measure the distance between the retainer and basewasher where the outer spring contacts them.
3. Free-travel should always be gross valve lift +.060" for safe operation.
4. Retainer to seal and retainer to guide clearance should also be gross valve lift +.060" for safe operation.
5. Failure to check valve train clearances can result in serious damage to an engine

Packaged By: _____

Date: _____

TECH TIPS

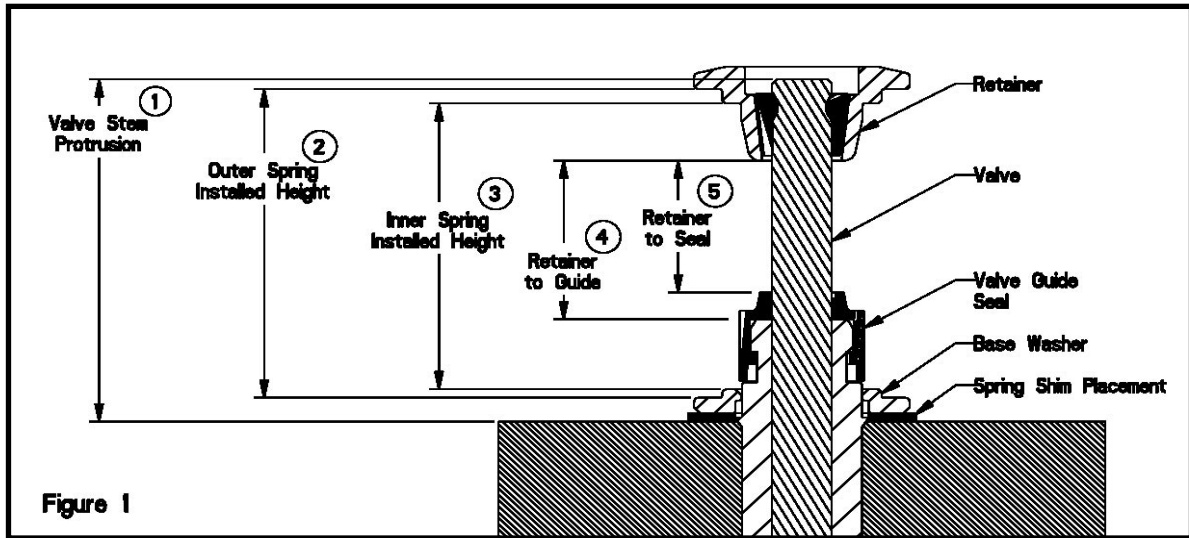


Figure 1

Valve Train Terminology

1. Stem Protrusion is measured from the tip of the valve stem to the cylinder head. See Figure 1.
2. Outer spring installed height is measured where the outer spring contacts the retainer and lower component when assembled. See Figure 1.
3. Inner spring installed height is measured where the inner spring contacts the retainer and lower component when assembled. See Figure 1.
4. Retainer to guide clearance is the distance between the valve guide (w/o the seal) and the bottom of the retainer, with the valve in the closed position. See Figure 1 and Notes 3 & 4.
5. Retainer to seal clearance is the distance between the valve stem seal and the bottom of the retainer, with the valve in the closed position. See Figure 1 and Notes 3 & 4.

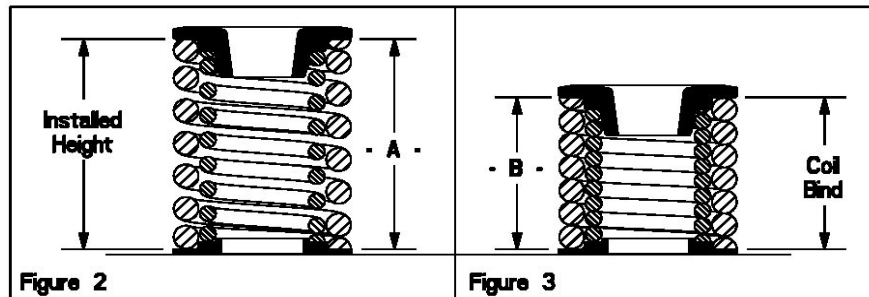


Figure 2

Figure 3

Installed Height

1. In Figure 2 the installed height is measured from where the outer spring contacts the retainer and the basewasher. This measurement is taken when the valve, basewasher, retainer, and keepers are assembled in the cylinder head.

Coil Bind / Solid Height:

1. In Figure 3 the coil bind height is determined by compressing the spring or springs with the retainer and basewasher in place, a vice can be used for this operation, once springs are compressed measure the distance between the retainer and basewasher where the outer spring contacts them.

Notes:

1. The difference between the installed height and the coil bind height is considered "Free-Travel"
2. Free-travel should always be gross valve lift +.060" for safe operation.
3. Retainer to seal and retainer to guide clearance should also be gross valve lift +.060" for safe operation.
4. Failure to check valve train clearances can result in serious damage to an engine.