



Installation Instructions for KPMI Part No: 80-80650 Yamaha YZF R1 • 2007-'08 Lightweight Racing Valve Spring Kit

A) 80-80650 Kit Includes

<u>Qty</u>	<u>Application</u>	<u>Description</u>
8 - Pcs	Intake	Titanium Retainers
8 - Pcs	Exhaust	Titanium Retainers
8 - Prs	Intake	Chrome Silicon Springs
8 - Prs	Exhaust	Chrome Silicon Springs
8 - Pcs	Intake	H.T. Steel Basewashers*
8 - Pcs	Intake	H.T. Steel Basewashers*
8 - Pcs	Exhaust	H.T. Steel Basewashers

*Each pair of Intake Springs sits on a pair of IN basewashers.

B) Recommended Installed Height - Intake

1. Installed Height (Outer Spring)	1.405" - 1.415"
2. Seat Pressure	50 lbs
3. Open Pressure at 0.380" lift	181 lbs
4. Open Pressure at 0.400" lift	188 lbs
5. Max Valve Lift	0.400"

Note: When shimming to achieve the recommended install height only use shims that support both the inner and outer basewashers. (See Figure 1)

Recommended Installed Height - Exhaust

1. Installed Height (Outer Spring)	1.275" - 1.285"
2. Seat Pressure	66 lbs
3. Open Pressure at 0.350" lift	154 lbs
4. Open Pressure at 0.400" lift	167 lbs
5. Max Valve Lift	0.400"

C) Notes

1. Intake and Exhaust components are not interchangeable
2. KPMI offers shortened guides for high lift cams. Call or check the website (www.kpmi.us) for information.
3. The difference between the installed height and the coil bind height is considered "Free-Travel"

The coil bind height is determined by compressing the spring or springs with the retainer and basewasher in place, a vice can be used for this operation, once springs are compressed measure the distance between the retainer and basewasher where the outer spring contacts them.
4. Free-travel should always be gross valve lift +.060" for safe operation.
5. Retainer to seal and retainer to guide clearance should also be gross valve lift +.060" for safe operation.
6. Failure to check valve train clearances can result in serious damage to an engine

Packaged By: _____

Date: _____

TECH TIPS

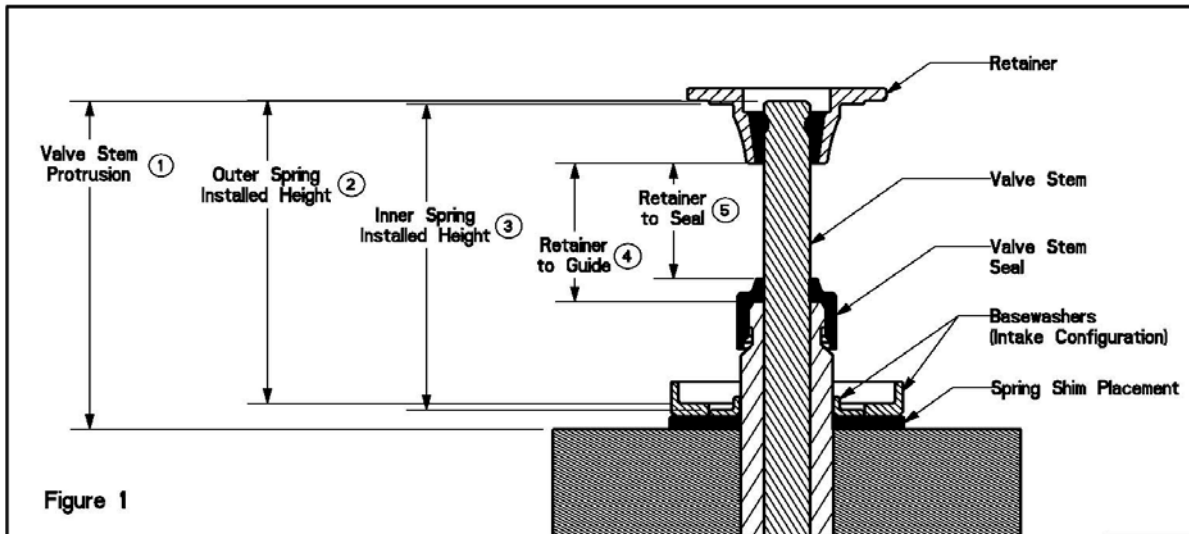


Figure 1

Valve Train Terminology

1. Stem Protrusion is measured from the tip of the valve stem to the cylinder head. See Figure 1.
2. Outer spring installed height is measured where the outer spring contacts the retainer and lower component when assembled. See Figure 1.
3. Inner spring installed height is measured where the inner spring contacts the retainer and lower component when assembled. See Figure 1.
4. Retainer to guide clearance is the distance between the valve guide (w/o the seal) and the bottom of the retainer, with the valve in the closed position. See Figure 1 and Notes 3 & 4.
5. Retainer to seal clearance is the distance between the valve stem seal and the bottom of the retainer, with the valve in the closed position. See Figure 1 and Notes 3 & 4.

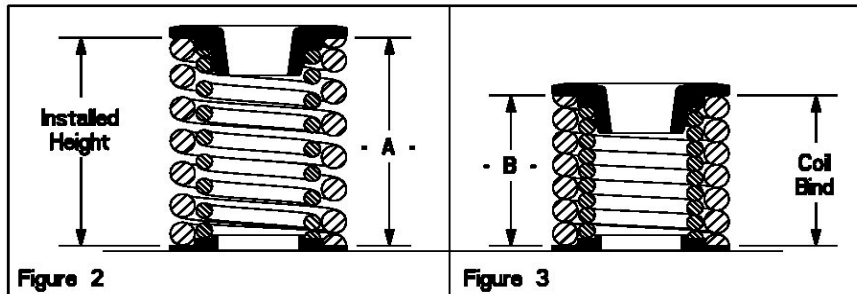


Figure 2

Figure 3

Installed Height

1. In Figure 2 the installed height is measured from where the outer spring contacts the retainer and the basewasher. This measurement is taken when the valve, basewasher, retainer, and keepers are assembled in the cylinder head.

Coil Bind / Solid Height:

1. In Figure 3 the coil bind height is determined by compressing the spring or springs with the retainer and basewasher in place, a vice can be used for this operation, once springs are compressed measure the distance between the retainer and basewasher where the outer spring contacts them.

Notes:

1. The difference between the installed height and the coil bind height is considered "Free-Travel"
2. Free-travel should always be gross valve lift +.060" for safe operation.
3. Retainer to seal and retainer to guide clearance should also be gross valve lift +.060" for safe operation.
4. Failure to check valve train clearances can result in serious damage to an engine.